

Tone Ringer Character

- Access menu**
 select Handset YES select Alerts YES
- Select type of call**
 select Ring type YES
- Select sound or melody**
 YES

Display light

- Access menu**
 select Handset YES select Display YES
 select Light or Contrast YES
- Light**
 select Automatic or Off YES
 - Contrast**
 adjust the contrast YES

Display Language

- Access menu**
 select Handset YES select Display YES
- Select language**
 YES

Key Lock

- Access menu**
 select Handset YES select AutoKeyLock YES
 - Lock/Unlock**
 YES
- To use when locked**
 YES Make your call or enter a menu
 (🔒 is displayed)

Phone Lock

- Access menu**
 select Handset YES select Phonelock YES
 - Select when PIN code shall be used**
 select PowerOn or Subscript YES
 - Lock/Unlock**
 Enter PIN code YES select On or Off YES
 (Default code: 0000)
- To change PIN code**
 select Handset YES select Phonelock YES
 select ChangePIN YES Old code YES
 New code YES New code YES


Symbol Explanations

- Scroll up**
 select Handset
- Scroll down**
- Scroll up or down**
 2x
- Scroll to a specific menu**
- Press repeatedly the key as many times as shown**

Volume Control

- Earpiece volume**
 + (During a call)
 -
- Tone ringer volume**
 select Handset YES select Alerts YES
 select RingVolume YES
- Turn ringer Off/On for current call permanently**
 (When ringing)
 (When not ringing)
- Discreet ringing**
 select Handset YES select Alerts YES
 select DiscreetRng YES

Menu Structure

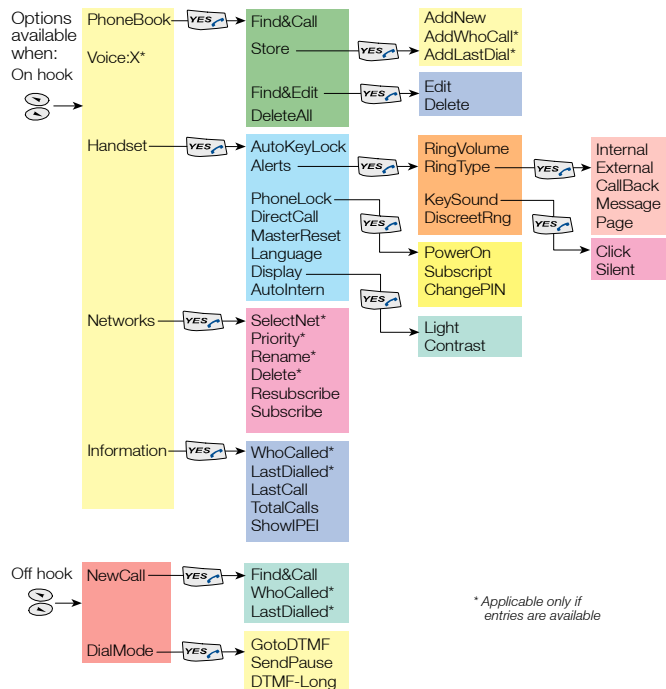

Ericsson Enterprise AB
 All rights reserved. For questions regarding the product, please contact your Ericsson Enterprise Certified Sales Partner.
 www.ericsson.se/enterprise

©Ericsson Enterprise AB 2001
 EN/LZT 103 07 R1B



DT288

Cordless Telephone for MD110

Quick Reference Guide



Subject to alteration without prior notice.

Switch On/Off

Switch on (Press until the display lights up)

Switch off (Press until the display turns blank)

Free Seating*

Logon * 11 * Individual auth. code * Ext. #

Logoff # 11 #

Answer Calls

Answer

Answer for another extension (Call pick-up) Call the ringing extension **8**
 Note! In France: **4**, in Sweden: **6**

Make Calls

Normal calls Dial number

Common abbreviated number Dial abbreviated number

Call by name (example: Eva) select PhoneBook select Find&Call
 2x 3x

Quick call by name (example: Bob) (Keep pressed for appr. 1 sec.) (Press quickly)

Last external number redial * * *
 Note! In Finland and Sweden: * * * 0

Last number redial Wait until number or name appears

One of last 10 numbers redial Wait until number or name appears

Who called Check Who Called? is shown
 i is shown or in general select Information select WhoCalled

During Connected Calls

End call

Mute, activate or cancel (Either keep pressed while muting, or press quickly to activate/cancel)

Dial digits **9** Dial digits **Note! In Finland: 1**

On Hold

Put on hold **R**

Resume call

Resume call that was put on hold on another telephone Call the extension where the call was put on hold **8**
 Note! In France: **4**, in Sweden: **6**

Inquiry

Ongoing conversation **R** Call the 3rd party

Refer back **2** Note! In Sweden: **R**

Return to first party **R**

Transfer

Ongoing conversation **R** Call the 3rd party (Press before or after answer)

Conference

Ongoing conversation **R** Call the 3rd party **3** (Press after answer)

When Busy Tone or No Answer

Callback **6**
 Note! In France, Finland and Sweden: **5**

Cancel individual Callback # 37 * Ext. #

Cancel all Callbacks # 37 #

Activate Call waiting **5** (At busy signal)

Note! In France and Finland: **6**, in Sweden: **4**

Call Forwarding

Personal number* * 10 * (1-5) #

Cancel # 10 #

Bypass diversion * 60 * Ext. #

Follow-me * 21 * New ext. #

Cancel # 21 #
 Note! In U.K. * 2 * and # 2 # are used for Follow-me

External follow-me * 22 # External code/No. #

Cancel # 22 #

Absence Information*

Activate * 23 * Cause
 * HHMM/MMDD #
 #

Cancel # 23 #

Voice Mail*

Entering your mailbox in general



Dial Voice Mail number Follow recorded instructions

select Voice: Follow recorded instructions

Phone Book

Enter letters, digits, etc.

Press a key repeatedly until the wanted letter, digit, etc., is shown in the display.

Key	Characters	Key	Characters
1	Space - ? ! , . : ' ' () 1	7	P Q R S & \$ 7 Π Ξ
2	A B C A Ä Å Æ Á Á Ä Ç 2 Γ	8	T U V Ü Ö Ù Ø 8
3	D E F É Ê Ë 3 Δ Φ	9	W X Y Z Ý 9
4	G H I G I I I I 4	0	0 + & @ / \$ % £ Θ Ξ Φ Ω
5	J K L 5 Λ	#	# * *
6	M N O Ñ Ø Ó Ö Ö 6		

Example: SMITH

4x 1x 3x 1x 2x

Erase a character

Move cursor (left) (right)

Lower/upper case * (add after the first letter)

Add Name and Number

1. Access menu

select PhoneBook select Store
 select AddNew

2. Enter name (example: Eva)

2x 3x 1x

3. Enter number

Enter number

Add from LastDialled or WhoCalled Lists

1. Access menu

select PhoneBook select Store
 select AddWhoCall or AddLastDial

2. Find wanted name or number

3. Enter or edit name

Enter letters

Edit Name or Number

1. Access menu

select PhoneBook select Find&Edit
 select Edit

2. Enter first letters and scroll to name

Enter letters

3. Edit name

Change or remove letters

4. Edit number

Change or remove digits

Note! To skip a question, press to proceed.

Delete Name and Number

1. Access menu

select PhoneBook select Find&Edit
 select Delete

2. Enter first letters and scroll to name

Enter letters

3. Delete

*Optional

Note! Ext. = Extension No.