

## Phone Lock


### Access menu



- To lock



- To change code

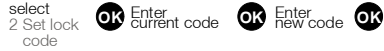

To open

Enter code

## Owner ID

### 1. Access menu



### 2. Enter new ID name

Enter characters (OK)

## Key Lock

### Manual, On/Off



### Automatic

#### 1. Access menu



#### 2. Yes/No (On/Off)



To use when locked



## Key Beep

### 1. Access menu



### 2. Select On/Off



## Quick Answer

Only applicable when the telephone is in a charging bay.

### 1. Access menu



### 2. Select Yes/No



## Display Language

### 1. Access menu



### 2. Select language



## Non-Movement<sup>2</sup>

### 1. Access menu



### 2. Select On/Off



## Symbol Explanations

- Scroll up
- Scroll down
- Scroll up or down
- select Menu 2 Add
- select Menu 2 Add
- 2x Press repeatedly the key as many times as shown
- (0-9) Press one of the keys 0-9

<sup>1</sup> Optional function for DT400,410 and 420

<sup>2</sup> Available for DT420 (optional) and DT430

## Volume Control

### Earpiece volume




### Tone ringer volume



### Turn ringer Off/On for current call



permanently

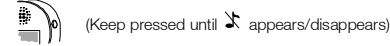

## Tone Ringer Character

### 1. Access menu



### 2. Select melody



### 3. Select speed



### 4. Select Trembler<sup>1</sup>



## Menu Structure



DT400, DT410, DT420, DT430

Cordless Telephones for MD110

Quick Reference Guide



## Switch On/Off

**Switch on** (Press until Switch on? is shown) **Note!** Press before the text disappears.

**Switch off** **(0-9)** (Press programmed Hot key 0-9 until Please wait is shown)

## Free seating\*

**Logon** \*11\* Individual auth. code \* Ext. #

**Logoff** #11#

## Answer Calls

**Answer**

**Answer for another extension (Call pick-up)** Call the ringing extension **8**

**Note!** In France: **4**, in Sweden: **6**

## Make Calls

**Normal calls** Dial number

**Abbreviated number Common** Dial abbreviated number

**Individual (Hot key)** **(0-9)** (Press programmed Hot key 0-9 until the number is shown)

**Call by name (example: Eva)** select Menu 1 Phone book select 1 Find

2x **3**<sup>De</sup> 3x **8**<sup>Uv</sup>

**Redial** Last external number \*\*\*

**Note!** In Finland and Sweden: \*\*\*0

**One of last 10 numbers** (Scroll to wanted number)

**Who Called? One of last 10 callers** (Scroll to wanted number)

**Note!** is shown when there are new, not answered calls or messages.

## During Connected Calls

**End call**

**Mute, activate or cancel**

**Loud listening, activate or cancel**

**Dial digits** **9** Dial digits **Note!** In Finland: **1**

## On Hold

**Put on hold** **R**

**Resume call**

**Resume call that was put on hold on another telephone** Call the extension where the call was put on hold **8**

**Note!** In France: **4**, in Sweden: **6**

## Inquiry

**Ongoing conversation** **R** Call the 3rd party

**Refer back** **2** **Note!** In Sweden: **R**

**Return to first party** **R**

## Transfer

**Ongoing conversation** **R** Call the 3rd party (Press before or after answer)

## Conference

**Ongoing conversation** **R** Call the 3rd party **3** (Press after answer)

## When Busy Tone or No Answer

**Callback** **6**

**Note!** In France, Finland and Sweden: **5**

**Cancel individual Callback** #37\* Ext. #

**Cancel all Callbacks** #37#

**Activate Call waiting** **5** (At busy signal)

**Note!** In France and Finland: **6**, in Sweden: **4**

## Call Forwarding

**Personal number\*** \*10\* (1-5) #

**Cancel** #10#

**Bypass diversion** \*60\* Ext. #

**Follow-me** \*21\* New ext. #

**Cancel** #21#

**Note!** In U.K. \*2\* and #2# are used for Follow-me

**External follow-me** \*22# External code/No. #

**Cancel** #22#

## Absence Information\*

**Activate** \*23\* Cause

**Cancel** #23#

## Voice Mail\*

**Entering your mailbox General** Dial Voice Mail number Follow recorded instructions

**When is shown** Follow recorded instructions

## Text Message (SMS)

**Accept new message**

**Scroll to saved message**

**Manual scroll when reading long message** (To return to automatic scroll: **C**)

**Delete message** **C**

**Manual absent** **(0-9)** (Press programmed Hot key 0-9 until Manual absent on or off is shown)

## Phone Book

### Enter letters, digits, etc.

Press a key repeatedly until the wanted letter, digit, etc., is shown in the display.

Key	Characters	Key	Characters
1	Space - ? ! , . : " ' ( ) 1	7	P Q R S B 7
2	A B C A A A E A A A A Ç 2	8	T U V Ü Ö Ü 8
3	D E F E É Ê Ë 3	9	W X Y Z Ý 9
4	G H I I I I I 4	0	0 + & @ / \$ % £ € \ ± ½
5	J K L 5	*	*
6	M N O Ñ Ø Ø Ø Ø Ø 6	#	# * < = > ^ _ ° ¸ ! ■

4x **7**<sup>NO</sup> 1x **6**<sup>Uv</sup> 3x **4**<sup>Uv</sup> 1x **8**<sup>Uv</sup> 2x **4**<sup>Uv</sup>

Example: SMITH

Erase a character **C**

### Add Name and Number

**1. Access menu** select Menu 1 Phone book select 2 Add

2x **3**<sup>De</sup> 3x **8**<sup>Uv</sup> 1x **2**<sup>Abc</sup>

**3. Enter number** Enter number

### Edit Name or Number

**1. Access menu** select Menu 1 Phone book select 3 Edit

**2. Enter first letters and scroll to name** Enter letters

**3. Edit name** **C** Repeat until wanted letters are removed Enter new letters

**4. Edit number** **C** Repeat until wanted digits are removed Enter new digits

**Note!** If no change, press to proceed.

### Delete Name & Number

**1. Access menu** select Menu 1 Phone book select 4 Delete

**2. Enter first letters and scroll to name** Enter letters

**3. Delete**

## Hot Key Programming

**1. Access menu** select Menu 2 Hot key select 2 Edit

**2. Select key**

**3. Select type of call** select 1 Not used, 2 Phone Number, 3 Function or 4 Data send

- 1 Not used

- 2 Phone number Enter digits

- 3 Function Select function

- 4 Data send Enter digit code

\*Optional

**Note!** Ext. = Extension No.