



This Quick Reference Guide includes short descriptions on how to use the basic features. More features, legal text and technical requirements are available in the User Guide.

Switching On/Off

Switch on: (Until display on) **Yes** (Within 2 seconds)

Switch off: **Press and hold Hot key** **Yes** **Ok**

Free Seating¹

Log on: ***11*** Authorization code *****
Own ext. No. **#**

Log off: **#11#**

Answer Calls

Answer:

Handsfree: **Press middle soft key**

On another ext.
(Call pick-up): **Call ringing ext.** **8**
France: **4**; Sweden: **6**

End call:

Make Calls

On hook: **Ext. No. or External line code and No.**

Off hook: **Ext. No. or External line code and No**

Handsfree: **Dial No. and press middle soft key**

Common Speed
Dialing number: **Dial Speed Dialing No.**

Dial a number via
Hot/Soft key: **Press and hold preprogrammed Hot key**
or **Press preprogrammed Soft key**

Make a call via the
phone book: **Find** Enter first letter of name **Ok**
 or (Until name is displayed)

Dial number from
the call list: (Until number is displayed)

Last External
Number Redial: *** * *** Finland, Sweden: *** * 0**

DT412/DT422/DT432

Cordless Telephones for Ericsson MX-ONE™
Telephony System and Ericsson MD110

Quick Reference Guide

The complete User Guide is available in electronic format on the Enterprise Telephone Toolbox CD and on <http://www.ericsson.com/enterprise/library/manuals.shtml>

Inquiry

Ongoing
conversation: **R** (See display) **Call 3rd party**

Refer back: **2**

Return and
finish Inquiry: **R** (See display)

Transfer

Ongoing
conversation: **R** (See display) **Call 3rd party**
 (Before or after answer)

Conference

Ongoing
conversation: **R** (See display) **Call 3rd party**
3 (After answer)

Callback

Activate: **6**
Finland, France, Sweden: **5**

Cancel single
Callback: **#37*** Ext. No. **#**

Cancel all
Callbacks: **#37#**

Call Waiting

Activate: **5** (At busy tone) **Wait on line**
Finland and France: **6**; Sweden: **4**

Handsfree

Activate or
Deactivate: **Press middle soft key**

General Deactivation

Cancel all activated
features: **#001#**

Menu structure

Messages Messages list >

SMS ¹ Send SMS >

Contacts Local phonebook >
Central phonebook
Call list >


Modes Normal >
In charger >
Mode 2 >
Mode 3 >
Mode 4 >
Mode 5 >
Mode 6 >
Mode 7 >
Mode 8 >
Mode 9 >
Switch off

Volume >
Ring signals >
Vibrator (on/off)
Key beep (on/off)
Alarm settings* >
Absent (on/off)
Answer >
Soft key
Name: ...

Services Service 1 >
Service 2 >
Service 10 >

* Only available for the DT422 and DT432 phone.
** Only available for the DT412 and DT422 phone.

Settings

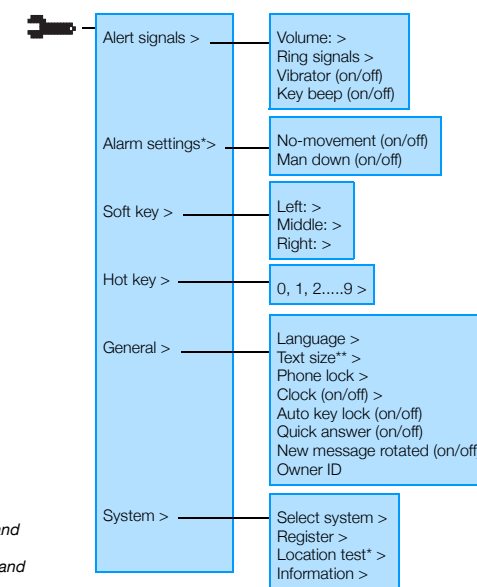

On hold

Put a call on hold: **R** (See display)

Resume call: (Within 30 seconds)

Resume on
another extension: **Call ext. where call was put on hold**
8
France: **4**; Sweden: **6**

Internal Follow-me

Order from your
own extension: ***21*** New ext. No. **#**
U.K.: ***2***

Cancel: **#21#**
U.K.: **#2#**

External Follow-me

Order: ***22#** External line code and No.
#

Cancel: **#22#**

Personal Number¹

Activate or
change profile from
own extension: ***10*** (1-5) **#**

Cancel: **#10#**

Voice Mail¹

Enter your mailbox: **Dial voice mail No. and follow recorded instructions**

New message
received: **Listen** Follow recorded instructions

Program a Hot/Soft key with a number

Program: or (Settings)
 (Soft key or Hot key)
 or (Select key) Edit
Enter name Save Change
 (Phone call) Select Enter No. Save

Absence Information¹

Order: ***23*** Absence code

With return
date/time: ***** Date/Time **#**
(Date sequence is system dependent)

Without return
date/time: **#**

Cancel: **#23#**

Abbreviations and Explanations

ext.	Extension	Yes, Find, Ok, Listen, Edit, Save, Change, Select	Soft key
No.	Number		
1	Feature may be optional		

Ericsson Enterprise AB. All rights reserved. Subject to alteration without prior notice. For more information, please contact your Ericsson Enterprise certified sales partner.

© Ericsson Enterprise AB 2006-10
EN Part of L2V 103 006