

## Tone Ringer Character

- 1. Access menu** select Settings YES select Ring type YES
- 2. Select type of call** YES
- 3. Select sound or melody** YES

## Phone Lock

- To lock or unlock** select Access YES YES YES Enter lock code YES
- To change lock code** (Default code: 0000) select Access YES select Change code YES Enter current code YES Enter new code YES Enter new code YES

## Key Lock

- Manual** select Keylock On YES
- Automatic**
- 1. Access menu** select Settings YES select Keylock YES
  - 2. On (Auto)/Off (Manual)** YES
- To use when locked** Make your call or enter a menu

## Display Language

- 1. Access menu** select Settings YES select Language YES
- 2. Select language** YES

## Display light

- 1. Access menu** select Settings YES select Light YES
- 2. Select On/Off/Auto** YES

## Answering Mode

Note: Only applicable when a headset is connected.

- 1. Access menu** select Settings YES select Answering mode YES
- 2. Select Any key/Auto** YES
- 3. Select On/Off** YES

## Time and Date Mode\*\*

- 1. Access menu** select Clock YES select Clock or Date mode YES
- 2. Select mode** YES

## Symbol Explanations

- Scroll up** select Store **Scroll to a specific menu**
- Scroll down** 2x **Press repeatedly the key as many times as shown**
- Scroll up or down** (0-9) **Press one of the keys 0-9**

\*\*Only supported on newer exchange versions

## Volume Control


**Earpiece volume** (During a call)

- Tone ringer volume low - - - - high** select Settings YES select Ring level YES
- increasing step-by-step** select Settings YES select Ring level YES select Step YES
- Turn ringer Off/On for current call permanently** (When ringing) select Settings YES select Ring level YES select 0 YES

## Key Sound

- 1. Access menu** select Settings YES select Key sound YES
- 2. Select Click/Tone/Off** YES

## Menu Structure

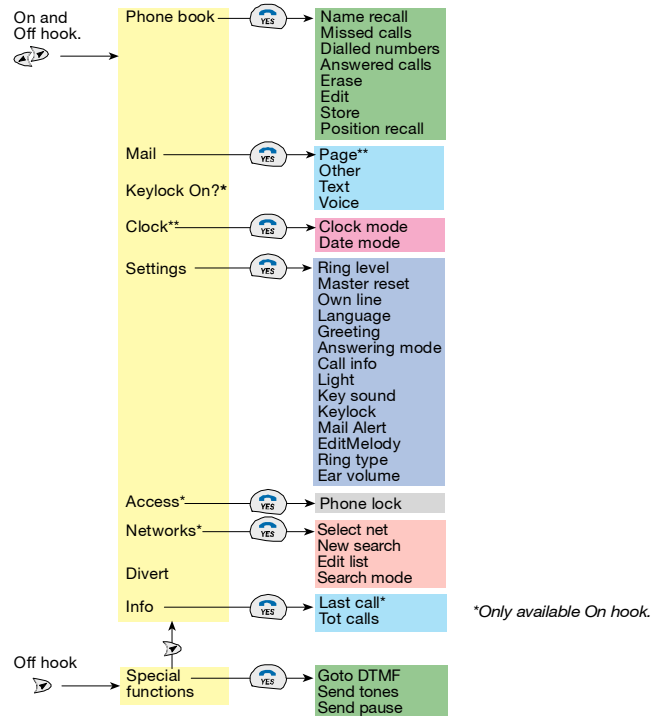

Ericsson Enterprise AB  
All rights reserved. For questions regarding the product, please contact your Ericsson Enterprise Certified Sales Partner.  
www.ericsson.se/enterprise

©Ericsson Enterprise AB 2001  
EN/LZT 103 17 R1B

subject to alteration without prior notice.

# Quick Reference Guide DT570

Cordless Telephone for MD110



## Switch On/Off

**Switch on** (Press until the display lights up)

**Switch off** (Press until the display turns blank)

## Free Seating\*

**Log on** \*11\* Individual auth. code \* Ext. #

**Log off** #11#

## Answer Calls

**Answer**

**Answer for another extension (Call pick-up)** Call the ringing extension   
 Note! In France: , in Sweden:

## Make Calls

**Normal calls** Dial number

**Abbreviated number Common** Dial abbreviated number

**Individual (Speed dialling) (1-9)**

**Call by name (example: Eva)** 2x 3x

**Quick Call by name (example: Bob)** (Keep pressed for appr. 1 sec.) (Press quickly)

**Redial Last external number** \* \* \* \*   
 Note! In Finland and Sweden: \* \* \* 0

**One of last 15 numbers**

**Answered Calls One of last 5 callers**

**Missed Calls One of last 5 callers**   
 Note! is shown when there are new, missed calls.

## During Connected Calls

**End call**

**Mute** (Keep pressed)

**Dial digits** Dial digits Note! In Finland:

## On Hold

**Put on hold**

**Resume call**

**Resume call that was put on hold on another telephone** Call the extension where the call was put on hold   
 Note! In France: , in Sweden:

## Inquiry

**Ongoing conversation** Call the 3rd party

**Refer back** Note! In Sweden:

**Return to first party**

## Transfer

**Ongoing conversation** Call the 3rd party (Press before or after answer)

## Conference

**Ongoing conversation** Call the 3rd party (Press after answer)

## When Busy Tone or No Answer

**Callback**   
 Note! In France, Finland and Sweden:

**Cancel individual Callback** #37\* Ext. #

**Cancel all Callbacks** #37#

**Activate Call waiting** (At busy signal)  
 Note! In France and Finland: , in Sweden:

## Call Forwarding

**Personal number\*** \*10\* (1-5) #

**Cancel** #10#

**Bypass diversion** \*60\* Ext. #

**Follow-me** \*21\* New ext. #

**Cancel** #21#   
 Note! In U.K. \*2\* and #2# are used for Follow-me

**External follow-me** \*22# External code/No. #

**Cancel** #22#

## Voice Mail\*

**Entering your mailbox In general** Dial Voice Mail number Follow recorded instructions

**When is shown** Follow recorded instructions

## Text Message\*\*

**Read new message** (Press repeatedly)

**Read a stored message**   
 (Press repeatedly)

## Phone Book

Enter letters, digits, etc.

Press a key repeatedly until the wanted letter, digit, etc., is shown in the display.

Key	Characters	Key	Characters
1	Space -?!,,:;"'<=>()	7	P Q R S ß 7 Π Ξ
2	A B C Ä Å Æ à ç 2 Γ	8	T U V Ü ù 8
3	D E F è é 3 Δ Φ	9	W X Y Z 9
4	G H I i 4	0	+ & @ / % \$ % ¥ \$ ð i 0 € Ξ Ψ Ω
5	J K L 5 Λ	*	Lower / upper case
6	M N O Ñ Ö Ø ò 6	#	# X

Example: SMITH

Erase a character

## Add Name and Number

**1. Access menu**

**2. Enter name (example: Eva)** 2x 3x 1x

**3. Enter number** Enter number

## Add Number from Telephone Memory Lists

**1. Access menu**

**2. Select number**

**3. Enter name (example: Eva)** 2x 3x 1x

## Edit Name, Number or Position

**1. Access menu**

**2. Select position or name**

**3. Enter position number, or name** Enter digits or letters

**4. Select item (Cursor at the end of a row)**

**5. Edit** (Repeat until wanted pos. is found) (Remove character to the left) Enter new characters

## Erase Name & Number

**1. Access menu**

**2. Enter position number** Enter digits

**3. Scroll to find name**

**4. Erase**

## Absence Information\*

**Activate** \*23\* Cause

**Cancel** #23#

\* Optional  
 \*\* Only available on newer exchange versions

Note! Ext. = Extension No.