

Alcatel·Lucent 

Alcatel-Lucent 400 DECT Handset
Alcatel-Lucent 300 DECT Handset









Edition 02














English (US)

Your telephone

Status icons

- | | |
|---|---|
|  Battery charge level: |  Ringer active |
|  Message(s) waiting (flashing) |  Ringer deactivated |
|  Programmed callback time |  Radio reception quality: |
|  Call forwarding activated |  Vibrator active |

Call icons

- | | |
|--|--|
|  | Making a call |
|  | Answering a call |
|  | In conversation |
|  | Call on hold |
|  | Access the directory feature |
|  | Transferring a call |
|  | Switching to DTMF signals |
|  | Setting up a conference |
|  | Place a call on hold |
|  | Parking an external communication (I) |
|  | Additional options (I) |

(I) if the system allows this




- Switch the screen on again
- Erase a character
- Return to previous menu
- Delete an entire field (long press)


- **Hang up**
- Return to first screen
- Switch off ringer
- Lock/unlock keypad (long press)

- Company directory
- Customizing your telephone (I) / Telephone ID (I) (long press)

- **Switch on / off** (long press)
- Rapid access to ringer adjustment

Back-lit screen (in colour for the 400 DECT)

The screen switches off automatically after a few seconds of inactivity.
To turn it back on, press the key 

Headset jack (400 DECT)Alcatel-Lucent **Light**

- **Green steady:** handset charging
- Green fast flashing: outside the radio field
- Red slow flashing: message present

■ **Adjust audio volume**■ **Access MENU**

- Confirm
- Display next selection of a list (up, down, left, right)

■ **Lift the receiver**

- Redial (long press)
- Broker call (during consultation call)

■ **Activate/deactivate loudspeaker (400 DECT)**

- **Activate/Deactivate the vibrating ringer (long press)**

Microphone



Access MENU



All features described here below can be accessed by a long press on specific keys. It provides access to all the features available on your system.



Directories: manage your personal directory and access the company directory.



Redial: auto call back



Forward: forward your calls to another number.



Mailbox: consult and send voice and text messages.



Appointment: program a callback time.



System lock: prohibit outgoing calls and modification of the programming.



Adjustment: adjust the basic features of your telephone (preferences)



Language: selecting language (if the system allows this).

For the description of the other menu icons, please refer to your phone set manual.

 
Making a call



Dial the number required



Send the call



Speak



Hang up



To make an external call, dial the outside line access code (9) before dialing your party's number.

 
Answering a call



You are answering a call



Lift the receiver



Speak

 


Hang up




Disabling the ringer: Press the hang up key when your telephone rings: it is still possible to answer by pressing the unhook key.

To call your personal directory (Individual number)

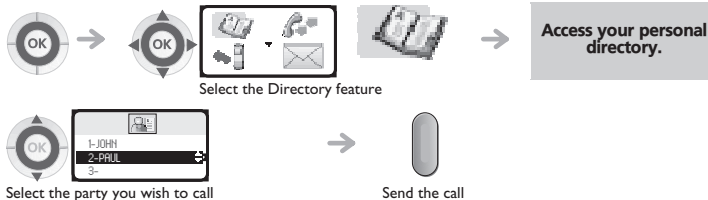

Refer to the user manual of your telephone to program an entry in the personal directory. Quick access (if the system allows this):

 Calling your party by name (company directory)

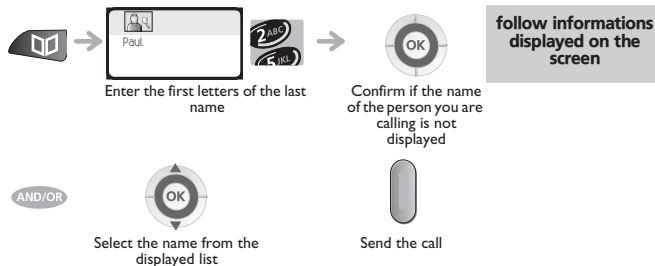

Redial



Quick access (if the system allows this): long press

Making a second call



You are on a call with the destination number



The first call is placed on hold



Calling a second person during a call



 
Send the call



You can also call a second party by selecting the icon or 2nd call text, or else by using your personal directory or the company directory.

Answering a second call


You are on call and a party is trying to contact you:



The caller's name is displayed for 3 seconds, and a beep is sent



 Lift the receiver




The first call is placed on hold




Over 3 seconds, move with the navigate-left-right key to the receiving a second call icon, to see the identity of the second caller (and off-hook if necessary)

Switching between two calls (Broker call)

 During a call, to recover the party on hold:



 Switching between two calls (Broker call)-
Single-line terminal only.



OR



Hang up the ongoing call



your telephone rings



 
OR



Press the line key with icon to recover the call on hold

Transferring a call

After dialing the destination number, you can transfer the call directly without waiting for your party's reply by validating the 'Transfer' option. You can initiate the transfer by using the icon or the 'Transfer' text. The transfer between two external parties and the transfer by pressing the hang-up key depend on the system configuration.



You are on call



Select the 'transfer' function
Select 'transfer'



Calling a second person



 
Select the 'transfer' function
Select 'transfer'



You can also transfer your call immediately, without waiting for your party to answer.

Three-way conference with internal and/or external parties (conference)

During a call, a second call is on hold.



Select the 'conference' feature



Number of second party

 


Select the 'conference' feature

To cancel the conference, press the **OK** key. This will put you back to the other party.

Forward your calls to another number


Forwarding calls to another number (immediate forwarding)

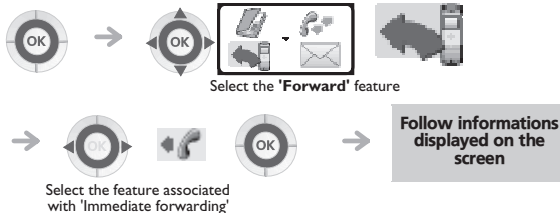

Immediate forwarding to your voice mailbox



 Canceling all forwardings

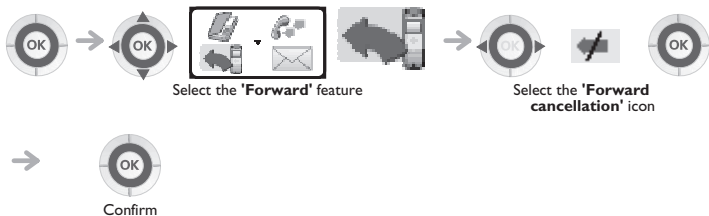

■ Precautions for use

This terminal and the supporting radio equipment have been designed for use with an Alcatel-Lucent OmniPCX Office system and have been officially approved for private use between wireless telephones via the associated private exchange. The following conditions must be respected, notably concerning the use of radioelectric frequencies:

- DECT equipment can only be used to establish links between fixed points if these links are temporary and the equivalent isotropically radiated power at the antenna is less than 250 mW.
- The conditions of access to a DECT equipment telepoint network shall be stipulated by contract with the attendant of the authorized telepoint network concerned.
- The power outlet used must be close to the charger/holder and easily accessible, so that it can be used as a way to turn power on or off.
- Switch off the telephone before changing the battery.
- Do not expose your telephone to severe conditions (rain, sea air, dust, etc.).
- Correct operation of your telephone is not guaranteed at temperatures outside the range -10°C to +45°C.
- You must not switch on or use your telephone near gas or inflammable liquids.
- A volume level that is too high can cause irreparable loss of hearing. Adjust the sound volume of your handset to a reasonable level.

■ Declaration of compliance

We, Alcatel-Lucent Enterprise, hereby declare that we assume the **Alcatel-Lucent 300 DECT Handset** and **Alcatel-Lucent 400 DECT Handset** to be compliant with the essential requirements of Directive 1999/5/CE of the European Parliament and Council.

This equipment uses the DECT harmonised frequency spectrum and can be used in all the countries of the European Community, Switzerland and Norway. No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.

This device has been designed and manufactured not to exceed the SAR (Specific Absorption Rate) radio frequency power transmission limits established by the different countries concerned. The SAR value measured is equal to 0.061 W/kg (the globally accepted maximum limit being 1.6 W/kg). Consumption in standby: 20 mW.

The labels and icons presented in this document are not contractually binding and may be modified without prior warning.

The labels and icons displayed on your phone depend on the system to which you are connected and may differ from those specified in this document.

Any unauthorised modification to the product shall render this declaration of compliance null and void. A copy of the original of this declaration of compliance can be obtained by post from :

**Alcatel-Lucent Enterprise - Technical Services - Approvals Manager
1, route du Dr. Albert Schweitzer
F 67408 Illkirch Cedex - France**



Information relative to the environment

This symbol indicates that at the end of its life, this product should be subject to special collection and disposal in member countries of the European Union, as well as in Norway and Switzerland. By ensuring this product is disposed of correctly, you will help to conserve natural resources and help prevent potential negative consequences to the environment and human health which could otherwise be caused by inappropriate disposal of this product. For further details about recycling this product, please contact the supplier who sold you the product.



Alcatel·Lucent 