DT590

Cordless Telephones for
MD Evolution Communication system
Quick Reference Guide

This Quick Reference Guide includes short description on how to use the basic functions. This QRG is available in electronic format on CD Telephone Toolbox, on CD Administration and on the site:
http://www.ericsson.com/enterprise/library/manuals.shtml

Switch the telephone on/off

Switch on: **NO** *more than 3s. Display on (Stand-by)*
Switch off **NO** *more than 3s. Display blank*

Answer calls

Answer: **YES** *or* 🔊

Mute ring sound temporarily: **C/Mute**

Mute ring sound permanently: **C/Mute + YES**

Call pick-up: **13** *+ No of ringing telephone +* **YES**

Call pick-up in a group: **14** *+* **YES**

Call pick-up of the general ringing: **15** *+* **YES**

End call: **NO**

Reject the call: **NO**

Make calls

On hook: *Extension No or External line code+ No +***YES**

Number redial: **11** *+* **YES** *(last external call)*

Speed dialing: *Speed Dialing No +* **YES**

From Call list : **YES**. *Select one of 20 calls with* ▼ *and* **YES**.

Quick call by a name in the phonebook:
Press and hold the key that holds the first character of the name. Use short presses on the same key to step between the characters. Press ▼ *to select the desired name +* **YES**

From Phonebook:
▶ *Enter Phonebook in the menu. Select "Call" and then "Find". "Name" appears. Enter the first characters or the whole name (or scroll with* ▼ *to find the name). Press* **YES**.

Send a pause *A long press on the* ♤ *key adds a pause. It is displayed as "-".*

ERICSSON

Callback

Activate: **1** *on free/ busy called extension*
Cancel: *Automatically after 15 minutes*

Intrusion

Activate: **3** *on busy called extension*

Call waiting on your phone

R + **14** . *The other party is put on hold.*

Hands free

🔊 *to turn on/ off the loudspeaker, either before dialing a number or during a call.*

Call on hold

Ongoing conversation: **R**

Call a third party

Ongoing conversation: **R** *N° of third party*

Return and finish inquiry

1

Refer back between 2 calls

2

Transfer

Ongoing conversation:
R + *No of third party*
And **NO** *(after or before answer)*

Conference

Ongoing conversation:
R + *No of third party*
After answer, **3**
NO *to leave the conference*

Voicemail

Enter your mailbox from your own phone:
Dial the voicemail number and follow voice announcements
NO *to end the call*

Volume/mute control

Earpiece/Loudspeaker volume:
◄ *or* ► *(during call)*

Ring signal on/off: **C/Mute + YES** *(on hook)*

Mute mode on/off: **C/Mute** *(off hook)*

Call forwarding all-calls

From your phone: **61** *+ No of receiver phone +* **NO**

Call forwarding on no-reply

From your phone: **62** *+ No of receiver phone +* **NO**

Call forwarding on busy

From your phone: **63** *+ No of receiver phone +* **NO**

Call forwarding on no-reply/busy

From your phone: **69** *+ No of receiver phone +* **NO**

Do not disturb

From your phone: **64**

Follow-me

From the phone in use:
65 *+No of your own phone +password+* **NO**

Call forwarding from 3rd party

Activate: **65** *+* ♤ *+No of your own phone+ No of receiver phone +password +* **NO**

Cancel any call forwarding

From your phone: **60** *+* **NO**

Appointment reminder

Activate: **71** *+ 4 digits HHMM (Hours/Minutes)+* **NO**
Cancel: **71** *+* **9** *+* **NO**

Retrieve from a group

Activate: **68** *+* **NO**
Cancel: **68** *+* **NO**

Key lock

To avoid any involuntary press
Lock keypad: ◄ *or* ► *(Toolbox)*
▲ *or* ▼ *(Locks) +* **YES**
Key lock + **YES**
Automatic + **YES + NO**
When you receive a call, the keypad is automatically unlocked and be locked again 30 seconds after the call is ended.

Unlock keypad: ♤ *+* **YES**

Lock your terminal

Activate: **78**
Cancel: **78**
Change password:
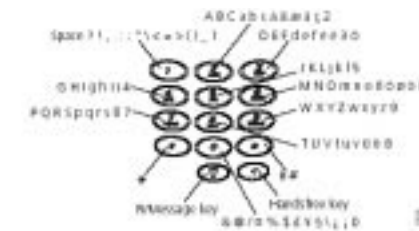**79** *+ old password+ new password*

Use the phonebook

You can consult and change **your personal** phonebook via the "Phonebook" menu. Names are listed in alphabetical order.

Add a New Entry. Enter "Phonebook" in the menu, select "Add" and then "New". Enter name, confirm with **YES**, and enter the number. See tips in Keypad. Press **YES** to save the new entry.

Edit Name and Number. Enter "Phonebook" in the menu, select "Edit". Enter the first character(s) in the name you are searching, or step with ▼. Change the name/number and press **YES** to save the entry.

Delete Name and Number. Enter "Phonebook" in the menu, select "Remove". Enter the first character(s) in the name you are searching, or step with ▼. Press **YES**; "Remove...?" is displayed. Press **YES** to delete the entry.

Keypad

In standby mode short presses enter the digits "0" - "9" and the characters ♤ and #. A long press on "♤" will add a pause and a long press on "0" will add the character "+".

When writing text messages and adding/editing names in the phonebook,
- A press on a key 0-9, ♤ or # displays the first available character on that specific key. The marked character is selected after a time out or when another key is pressed. A press on the ♤ - key switches between upper and lower case.
- Add space in text by a short press on key 1.
- Delete a character by a short press on the C-key.
- Delete all characters by a long press on the C-key.
- Enter "+" in number input mode by a long press on key 0.
- Enter a pause in number input mode by a long press on the ♤ key.

Description of the handset

Keys 1 2: increase/decrease the earpiece volume

Key 4: YES. Used for call connection; one short press in stand-by mode will open the call list; always press this button to confirm choices when working in menu mode.

Key 13: NO. For call disconnection; for returning to previous screen; pressing more than 3 seconds will switch the handset on/off.

Key 5: C/Mute. In stand-by mode, mute the ringer in stand-by mode; or mute the microphone when calling.

Key 11: Menu. Open Phonebook menu in stand-by mode; open "3rd Party" menu in In-call mode; or if the button has been used for leaving the menu mode, the last used menu will be entered.

Key 12: Navigation key. To step in menu mode and text mode. When ► is pressed in stand-by mode and In-Call mode, the left most menu tab is displayed and when ◄ is pressed the right most menu tab is displayed. ▲ and ▼ is used for stepping in the menu lists.

Key 8: R/Messaging key. In stand-by mode, place an outgoing call to a specific extension. If the "voice message" icon appears, you can enter your voicemail to retrieve the voice message.

Key 9: Hands free key. To turn on/off the loudspeaker

DT590 display

Stand-by menu

User identity (name)
User identity (number)

Date
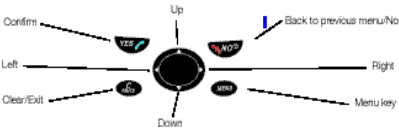Hour
Icons: key lock, alarm, time

Info row (icons)

Icons

"Signal strength" visible when the handset is connected to a system.

"Ring signal muted" shown when the Mute button is pressed and "Ring muted?" selected.

"Battery" always shown in standby mode. When the level is low, it is time to charge the battery.

"Loudspeaker" when the loudspeaker is activated and when the handset is in loudspeaking operation.

"New message" indicates a new text message.

"Voice message" when at least one new voice message has not been heard

"Confirm message" when a received message is to be accepted or declined by the user

"Keys locked" indicates a locked keypad.

"Headset" indicates that a headset is connected to the handset.

"Microphone muted" indicates a muted microphone.

"Redirected call" indicates that all calls are re-directed to another extension.

"Outgoing call" icon in the call list

"Answered call" icon in the call list

"Missed call" icon in the call list.

"Call info" icon indicates that there are new missed calls in the call list

"Data cable" icon is visible when a data cable is connected to the handset.

"Search phonebook" icon is visible when it is possible to press key and search for a name/number in the phonebook.

Menu tabs

The "Phonebook" menu contains all names/numbers in the personal phonebook

The "Message" menu contains all message handling (read, listen, write, send)

The "Call info" menu contains call list and call time

The "Call service" * contains absent handling, and diversion of calls

The "Toolbox" menu contains a calculator, alarm clock, and personal handling settings such as changing the ringer volume, selecting language, etc.

The "3rd party"* menu contains all functions for calls where a third (or more) party is involved.

The "Ongoing call" menu contains short-cuts to the message menu and to the call list, and possibility to change to DTMF signalling mode etc.

The "User busy" menu camp on* on PBX internal calls if the called person is busy. Or call back* when the called line no longer is busy.

In the "Call waiting" menu, information of the caller can be found (if available) if other party initiates call waiting. A call waiting can be picked up on another terminal while maintaining the first connection.

* Subscription specific.to PBX

Keys used for menu handling

Enter/ Exit the menu
Enter the menu mode by pressing the menu key, or navigation key ● or ●. Use ● ● to choose tab and press **YES** to open it; a heading is shown and the first alternative is marked. Use navigation key ● and ● and to step in the alternatives and press **YES** to select your alternative.

Always confirm your alternatives/settings with a press on **YES**. Pressing **NO** takes you back one step and a press on **MENU** takes you back to stand-by mode.

Stand-by Menu Tree

Phonebook	Call	All entries
	Add	New
		From Call list
	Edit	Entries the local phonebook
	Remove	'
	Central *	Entries in the central phonebook
Messages	Voice *	Access to your voice mailbox
	Inbox	The 10 last received mess.
	Send	Unsent
		New
		Sent
Call Info	Missed calls	Missed calls in a separate list
	Call list	The 20 last calls (10 dialed, and 10 incoming and missed calls)
	Call time	Accumulated outgoing call time and for the last call
Call service	Absence *	To specify the reason for absence and when you are present again.
	Divert *	You can divert a call to another number
Toolbox	Alarm (Set, Clear)	
	Calculator	
	Sound &Alerts	Ringer Volume
		Vibrator Alert
		Ring signals
		Alarm signals
		Message alert (mail, voice)
		Key sound (silent/ click/ tone)
	Display	Backlight
		Contrast
		Add.Disp.Mgt.
	Network	Subscribe
		Select
		Priority
		Rename Subscriptions
		Remove
	Time &Date	Time format
		Date format
	Locks	Key lock (on/off)
		Phone lock (on/off)
	Answering mode	Any key (on/off)
		Auto Answer (on/off)
	Language (11 languages)	
	In Charger Mode	Redirect
		Off
	Master reset	Reset settings
		Reset all

In Call Menu Tree

3rd party *	Call 3rd party
	Switch call
	Transfer
	Add to conference
	End new call
Phone book	Refer above
Ongoing call	Message
	Call list
	Long DTMF
	Short DTMF
	Send pause
User busy *	Call waiting
	Call back
Call waiting *	Info (of the caller if available)
	Switch (to answer the call on another line)

* Subscription specific to PBX