DT288 Cordless Telephone for MD110

User Guide





Welcome to the User Guide for the DT288 cordless phone in the Ericsson Enterprise business communication system MD110.

It is a state-of-the-art business communications system. Its alliance of features and facilities effectively improves communications for virtually any kind of organization.

To take full advantage of these advanced features and facilities there is a line of telephones, designed for ease of use in every situation. Your phone is menu driven. By use of the Scroll keys and the CLR, YES and NO keys you get access to frequently used functions and numbers. Step-by-step instructions in the display assist your actions on the phone.

Some markets use differing codes for some functions. In this guide, all functions are described using the most common code for every specific function. As a note the markets and their differing code is shown.

The User Guide describes the facilities of the Ericsson Enterprise communication system and the DT288 phone as it is programmed at delivery from the factory. There may be some differences in the way your system is programmed. Please consult your system administrator if you need further information.

Table of Contents

	page
Important	
Description	
Switching On/Off	11
Free Seating (optional)	12
Incoming Calls	13
Outgoing Calls	
During Calls	
When You Receive a Busy Tone	
Call Forwarding	
Internal Messages	
Voice Mail	
Information	
Abbreviated Numbers	
Phone Book	
Group Facilities	
Other Useful Facilities	
Paging (optional)	
Authority	
Settings and Adjustments	
Audible Signals	
Display Information	
Installation	
TroubleShooting	
Index	
INDEX	84

EN/LZT 103 06 R1B

© Ericsson Enterprise AB 2001

All rights reserved. No parts of this publication may be reproduced, stored in retrieval system,or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the publisher.

Important

IPEI code

Your telephone has an International Portable part Equipment Identity (IPEI) code. This code is needed for your system administrator to enable network subscription.

Furthermore you may need the IPEI code to unblock your telephone if an incorrect PIN code has been entered three times (=telephone is blocked).

To find the IPEI of your phone:



Select Information and press



Select ShowIPEI and press



Enter your PIN code and press

(Default code: 0000) The IPEI number is displayed.

Note: Once the phone is blocked it is impossible to read the IPEI code in the phone. Therefore, write down the IPEI code but keep the code secret to prevent misuse of your phone.

Guidelines

Consider these suggestions and guidelines to keep your telephone in good shape and working properly.

Intrinsic safety

The telephone is not specified as intrinsically safe, so do not use these telephones in areas with a danger of explosion.

Battery handling

The battery contains environmental polluting material. If defect, return it to a collecting point.

Cleaning

Clean your telephone only with a soft, water dampened cloth. Using soap or any other cleaning materials may discolour or damage the telephone.

Treatment

Do not expose your telephone to direct sunlight for long periods. Keep the telephone away from excessive heat and moisture.

Description



Warning Light Ringing, message waiting, battery low, exit cover area.

Earpiece

Display (3 rows) Display at rest. Work is the network name and 123 is (your) extension number. See section "Description/ Display info".

On/Off / On hook / No Switch on/off, end call, one menu back. Cancel a menu option.

Control key (down) Scroll down through menus, name list. Move right in choices.

Keypad

Internal call key

Connect to other portables when used in a home environment. Not used in the MD110 system.

R-key

Put call on hold (inquiry), take call off hold. See section "During calls".

Microphone

Off hook: lower earpiece volume. See section "Adjustments".

> Off hook / Yes Answer call, accept.

Delete latest entered digit. Backspace when editing text. Cancel a menu option. Microphone-, ringer- and warning on/off, see sections "During calls" and "Adjustments".

Control key (up)

Scroll up through menus or Move left in choices.

> Space, hyphen, etc., when editing text.

See section "Installation".

Star / Pause / Text case Insert a dial tone pause. Upper/lower case in text mode.

Display info

The display gives you visual feedback on all actions that you perform, and also textual warnings. The upper two rows are text rows (12 possible characters in each row), showing menus that vou can access, names and numbers that you edit or dial, your telephone id etc. The lower row displays different states, visualized by icons. For more information see section "Display information".

11	12		(i 🗉	III Þ

Text row signs

Menu pointer / Diversion indicator Shows the menu that can be accessed by pressing yes. When displayed before a name or number it indicates that the telephone is diverted to another extension.



>

Number too long for display

There are more digits to the left.



Dash

Indicates that a pause is programmed in the telephone number.



Exclamation Mark

Marks an unread entry in an entry list.

Icon row signs



Signal strength

On when your telephone is locked to the system. The bars indicate reception quality. Four bars indicate optimal reception.



Ringer off

On when the ringer is suppressed or switched off.



Message

Flashes when messages are received.



Call

On when your telephone is off hook and flashes during ringing.



Battery charging indicator

The battery cells are flashing sequentially when the battery is being charged and is on when charging is completed. Indicates the amount of talk and standby time left.



Key lock

Indicates that the key pad is automatically locked 1 minute after being used.




Who Called list indicator

Indicates a new unanswered entry in the Who Called list.

Display menu


Your cordless telephone is menu-driven. Each menu forms a loop.

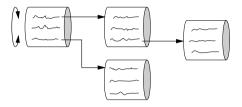


Navigating the menus

You can activate the menus by pressing the Control up key or the Control down key. These keys are also used to scroll through the menu structure.

The CLR, YES and NO keys are used to reach the desired option.

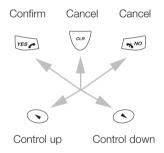

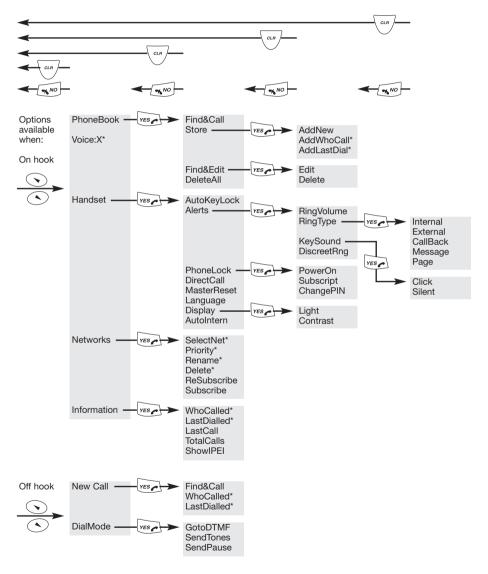

Menu structure

* Applicable only if entries are available

Switching On/Off

Switch on



Press until the display lights up

If your telephone does not switch on or the battery icon starts flashing, the battery is low. Charge the battery. While charging, you can use your telephone normally.

> **Note:** If the signal strength icon is off and the message **No Network** is displayed you cannot make or answer calls. See section "Troubleshooting".

Switch off




Press until the display turns blank

Note: During calls, you cannot switch off your telephone.

Free Seating (optional)

The free seating function is used for persons who have an office extension number but no telephone set of their own. For example, flexible office workers, persons mostly working outside the office, etc. As a free seating user and working from the office, you logon to any free telephone set that temporarily will be assigned with your extension number and your system authorities.

To log on:

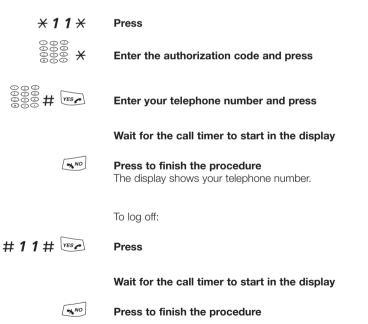

Note: An earlier version of the free seating function use other procedures: To log on, press **X 1 0 X** extension No. **#**. To log off, press **# 1 0 #**.

Incoming Calls

Answer calls

A ringing signal indicates an incoming call and the warning light flashes quickly. The ringing type tells you whether the call is an internal, external or call back call and the display indicates an incoming call.

Display example:





Press to answer

If the telephone rings at an inconvenient moment:



Press to suppress ringing for the moment

Note: Calls can be answered at any time, no matter if you are programming, or keying in a number etc.



Press to end the call

For another extension

You can answer a call to another telephone. When the telephone rings and there is nobody to answer the call:



Call the ringing extension and press Busy tone.

8 Press

Note: France-press 4; Sweden-press 6

Outgoing Calls

Make calls

How to make internal and external calls.

Notes:

- Correct a wrong entry by pressing the CLR key.
- If you decide not to make the call while keying in the number, press NO to stop.
- If you receive a call while keying in the number, simply press YES to answer.
- You can make your calls faster by using abbreviated numbers or call-by-name.

Internal calls



Dial the extension number and press

External calls

Dial the digit or digits to get an external line



0

Dial the external number and press

To insert a pause if you have to wait for dial tone:

X Press

Your telephone will go off hook and dial the number. On the display the duration of the call is shown.

Off hook dialling

If you prefer to dial a number off hook:



Press Dial tone.



Dial the number





Press

Last external number redial

When you initiate an external call the system automatically stores all the dialled digits, irrespective of whether the call was successful or not.



Press to redial the saved number

The last external number is automatically redialled.

Note: Sweden and Finland-press **X X 0** YES.

Redial number from LastDialled list

The last twenty dialled numbers are memorised by your telephone. You can redial one of these numbers by selecting the number from the LastDialled list.

YES C

Select Information and press



Select LastDialled and press



Scroll, select number and confirm

A number marked with a ! means a new number. You can store numbers permanently by adding them to your phone book. See section "Phone book".

Note: The LastDialled list will be cleared if the power of your telephone is lost (e.g. if you remove the battery).


Call number from WhoCalled list

Your phone keeps a list of people who have called you (if supported by the network). Whenever there are entries in the list, you can view or call back a number with the WhoCalled option. If the "Who Called list indicator" is shown in the display, there are one or more new numbers added since the last time you entered the WhoCalled list.

When the phone is switched off, the WhoCalled list is erased.

Numbers in the WhoCalled list can be added to your Phone Book, see section "Phone Book".

To call

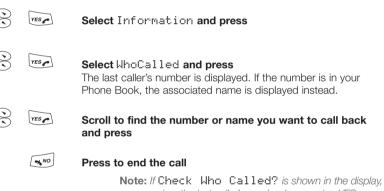

you can view the last caller's number by pressing YES. To call the number, press YES once again.

During Calls

Mute microphone

To mute the microphone during an ongoing conversation:



Press and hold The caller will not hear what is being said in your room.

or



Press shortly, to turn the microphone off Short beeps confirm that the microphone is off.



Press again, to turn the microphone back on

Mute warning signal

If a warning sounds during an ongoing call, e.g. when the battery runs low, you can turn off the signal temporarily.



Press shortly

Note: When a warning occurs during a call and you want to mute the microphone, the first press always mutes the warning sound. The second press mutes the microphone.

Inquiry

You have speech connection and want to make an inquiry to an internal or external party.



Dial tone.

000
$\odot \odot \odot$
000
000

Call the second party

The first party is put on hold. When the other party answers you can switch between the calls (refer back), transfer the call, create a conference or end the call.



Press to end the inquiry call

The second party is disconnected.



Press to return to the first party

Refer back


2 Press to refer back to the other party

The party you talked to is put on hold, the other party is connected.

Note: Sweden - press R to refer back to the other party.

Inquiry via the PhoneBook

If you don't know the number by heart, you can make an inquiry to a second party in the Phone Book during a call.

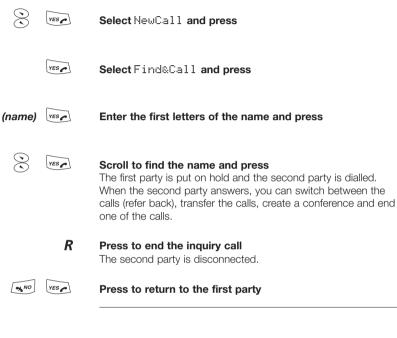

Transfer

You want to transfer an ongoing call.



Press

Dial tone.



Call the second party



Press before or after answer

The ongoing call is transferred.

Note: If you have put more than one call on hold the last call that was put on hold will be transferred. If the dialled extension is busy or transfer is not allowed, your telephone will ring again.

Conference

With this procedure you can include up to seven parties in a conference. Only the conference leader can admit participants. During the conference a tone will be heard every 15th second.

Note: The conference tone might be disabled for your system.

You have an ongoing conversation and want to establish a telephone conference. You will become the conference leader.



Dial tone.

$\odot \odot \odot$
000
$\odot \odot \odot$

Call the second party Wait for answer.

3 Press to establish a conference

Repeat the procedure to add more conference members



Press to leave the conference

On hold

You can temporarily put the ongoing call on hold. Calls put on hold can be resumed on your own telephone or another.



Press

Dial tone.



Press

To resume the call



Press within 30 seconds

If not resumed within 30 seconds you will be called back. An unanswered external call will be re-routed to the operator after another 30 seconds.

To resume on another extension



Call the extension where the call was put on hold and press Busy tone.

8 Press

Note: France - press 4; Sweden - press 6.

Dialling during a connected call

When calling interactive tele-services, e.g. telephone banks, you need to use Dual Tone Multi Frequency (DTMF) signals. If your exchange is not already programmed to automatically convert your entered digits into DTMF signals, you need to activate the function during the call.

During an ongoing call:



Press and dial the required digits

Note: Finland - press 1 and dial the required digits.

When You Receive a Busy Tone

Busy extension or external line

If you call an extension and receive a busy tone or get no answer or all external lines are busy, you can use these methods:

Automatic callback, extension

If a called extension is busy or there is no answer:



Press

Note: France, Sweden and Finland - press 5.



Press to finish the procedure

You are called back (recall ringing signal) when the ongoing call is finished or the next time a new call is finished. You have to answer within eight seconds, otherwise the callback service is cancelled.



Press when you are called back

The system calls the extension.

Note: Callbacks can be activated on several extensions at the same time.

Automatic callback, external line

If all external lines are busy when YES is pressed after dialling the digit or digits to get a line and the external number (Onhook dialling):

6 # Press

Notes:

- France, Sweden and Finland - press 5 #.

 If you were dialling Offhook (YES was pressed before the digit or digits to get a line), you are required to add the external number now.



Press to finish the procedure

When an external line becomes free you will be called back (special ringing signal). You have to answer within eight seconds otherwise the callback service is cancelled.



Press when you are called back

The system calls the external number.

Note: Only one callback can be activated on a busy external line.

Cancel any single callback



Press and dial the extension number

Note: To cancel a single callback on a specific external line, dial the digit or digits to get a line instead of the extension number.



Press



Wait for the call icon to stop flashing



Press to finish the procedure

Cancel all callbacks





Wait for the call icon to stop flashing



Press to finish the procedure

Activate call waiting

If you urgently wish to contact a busy extension or a busy external line, you can notify it by a call waiting signal.

5 Press

Note: France and Finland - press 6; Sweden - press 4.

Keep your telephone off-hook

When the called extension or the external line becomes free, it will be called automatically.

Note: The call waiting function might be blocked for use on your extension (programmed by system administrator). If call waiting is not allowed you will continue to receive a busy tone.

Intrusion on a busy extension

You can intrude on an ongoing call on a busy extension.

4 Press

Note: France and Sweden - press 8.

Before the intrusion is executed a warning tone is sent to the parties in the ongoing call. A three party call is established and a warning tone is heard.

Notes:

- The warning tone might be disabled for your system.
- The intrusion function might be blocked for use on your extension (programmed by system administrator).
 If intrusion is not allowed you will continue to receive a busy tone.

Call Forwarding

Internal follow-me

All calls to your extension are diverted to an extension of your choice (within the private network). During follow-me the display shows a \geq after your number. On the next row the answering position number is shown. You will also hear a special dial tone that indicates that your line has follow-me. You can still make calls as usual

Order

.....



l**ini** þ

Cancel

# 2 1 # VES C	Press
	Note: U.K press #2# YES.
~	Wait for the call icon to stop flashing
The NO	Press to finish the procedure

External follow-me

If external follow-me is allowed you can have all calls to your extension diverted to an external number of your choice. During follow me the display shows a > after your number. You will also hear a special dial tone that indicates that your line has follow me. You can still make calls as usual.

Order

×22# Press



Dial the digit or digits to get a line and the external number



Press




Wait for the call icon to stop flashing



Press to finish the procedure

Display example:



Cancel

2 2 # Press



Press



Wait for the call icon to stop flashing



Press to finish the procedure

Bypass diversion

If bypass diversion is allowed from your extension, you can bypass an activated diversion/follow-me on a specific extension.





Dial the extension number



Press and wait for answer

Personal number

With this function you can be reached on your normal office telephone number even if you are in another room, out of the office, at home, etc.

Depending on the functionality of your office exchange, you have either one individual single search profile (standard) or you can choose between five individual search profiles (optional). A search profile can be designed to fit the situation, i.e. In the office, On travel, At home, etc. Both internal or external telephone numbers can be used in a profile.

On your request, the search profiles are programmed or modified by the system administrator. See section "To design and order your search profiles".

When the function is activated, incoming calls are transferred to different telephones or back-up services in your decided order. If an answering position in the profile is busy, the call can be transferred to another predefined position in the profile, i.e. voice mail or a colleague. You can activate the function from your own office telephone, or when out of the office by using the Direct Inward System Access function (DISA).

> **Note:** If the operator is included in the activated profile as an answering position, always inform the operator if you are absent. Use the absence information function or call the operator. If voice mail is included in the activated profile, always update your greeting with absence information.

To activate or change to another profile from your office telephone

- ×10× Press
 - (1-5) Dial the search profile digit

VES

Press

Wait for the display to show the chosen search profile digit.



Press to finish the procedure

To cancel from your office telephone

#10# Press



Press



Wait for the call icon to stop flashing



Press to finish the procedure

To activate or change to another profile from an external telephone

The external telephone must be of push button type provided with hash (#) and star (\times) keys or a mobile telephone adapted for dial tone pulses (DTMF).

000 000 0	Call the DISA function at your office
0	

Dial tone.

× 75× Press

രരര

- Dial your own extension number and press Dial tone.
- ×10× Press

000 000 000

000

- (1-5) Dial your own extension number, press and dial the search profile digit
- # Contract Press and end the call

To cancel from an external telephone

The external telephone must be of push button type provided with hash (#) and star (\times) keys or a mobile telephone adapted for dial tone pulses (DTMF).

020 060 000 0	Call the DISA function at your office Dial tone.
*75 *	Press
©©© ©©© ©©© ★	Enter the authorization code and press
©©© ©©© # ©© #	Dial your own extension number and press Dial tone.
#10×	Press

Dial your own extension number, press and replace handset

To design and order your search profiles

The search profiles are installed or changed by the system administrator. In order to set up your profiles, copy the setting form, fill in your new or changed profiles and give it to your system administrator.

Note: If personal screen call server is connected to your system, you can edit the profiles via your Intranet. See instructions for the server!

Important notes when designing your search profiles:

• Avoid a ringing time longer than 45 seconds for your profiles Usually the caller hangs up after 3-6 ringing signals. If you need a longer ringing time, the maximum time is 60 sec.

 Consider the time you need to react and answer on each answering position in your profiles

You might need up to 15 seconds to react and answer on a desk or cordless telephone and 20-25 seconds for a mobile telephone. There must be an answering position at the end of every profile (voice mail or operator/secretary)

If not, calls might end up unanswered.

- Consider what should happen when you are busy on a telephone The available options are:
 - Diversion to Voice mail
 Diversion to the operator

 If an answering machine, a FAX or other answering service is used as an early answering position, it might interrupt the searching Disconnect the answering service, or design the ringing times so they do not affect the searching.

- If your system admits just one single personal profile, design the profile only with your 2-3 most frequently used positions
 If you add more numbers, there is a risk that the caller hangs up before a late position is called.
- If your system admits 1-5 personal profiles, design the different profiles to fit your most used positions

Make sure you use as few answering positions as possible for each profile. Profile examples:

- In office
 At home
- On travel
 Absent/not reachable

Example:

How to fill in your setting form for search profiles:

Profile 1 In office

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1	Desk	1234	10
2	Cordless	5234	15
3	Voice Mail		

* Examples: Desk, Cordless, Mobile, External, Voice Mail, Operator, etc.

Profile 2 At home

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1	External	222222	20
2	Mobile	0706666666	25
3	Voice Mail		

Setting form for search profiles

 Name:
 Department:

 Telephone No:
 Account:

Profile 1

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1			
2			
3			
4			

* Examples: Desk, Cordless, Mobile, External, Voice Mail, Operator, etc.

.....

.....

Profile 2

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1			
2			
3			
4			

Profile 3

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1			
2			
3			
4			

Profile 4

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1			
2			
3			
4			

Profile 5

	Type of telephone or answering position*	Telephone number	Ringing time (seconds)
1			
2			
3			
4			

Internal Messages

Manual message waiting (MMW)

If the called extension does not answer you can initiate a message waiting indication on that extension (if this function is allowed).

Order MMW to another extension



Press and dial the extension number



Press



Wait for the call icon to stop flashing



Press to finish the procedure The message symbol lights up on the called extension.

Cancel MMW to another extension



Press and dial the extension number



Press



Wait for the call icon to stop flashing



Press to finish the procedure

To listen to received messages

When your telephone beeps and the message symbol is flashing in the display:



Select Voice:3

The digit shows the number of messages stored.



Press to call the number that requested message waiting

Voice Mail

Integrated voice mail (optional)

This function allows you to leave a voice message to the caller when you are unable to answer calls, e.g. when out of office, in a meeting, etc. Then the caller can leave a message in your mailbox. When back in office you can enter your mailbox and listen to received messages. You can choose to divert all incoming calls to your mailbox, calls when there is no answer, or calls when your telephone is busy.

When you enter your mailbox, you will hear recorded instructions how to handle listening, recording, storing and deleting messages, and how to change your security code.

To activate and deactivate your mailbox

See section "Call forwarding - internal follow-me" (function code 21). Use the number to the voice mail system as the "answering position number".

To enter your mailbox when there is a new message

The message icon is flashing in the display. The voice mail ringer tone sounds when a new message is received.



Select Voice = x and press

(x=number of received messages).

If you are asked to enter your security code:



Enter your security code

Code at delivery = your extension number.

To enter your mailbox in general

When you want to listen to saved messages, change your security code or change your greeting.



Enter the number to the voice mail system and press

If you are asked to enter your security code:



Enter your security code Code at delivery = your extension number.

To enter someone else's mailbox



Enter the number to the voice mail system and press

If you are asked to enter your security code:

Press



Enter the mailbox number Normally the office extension number of the person served.

If you are asked to enter a security code:




Enter the security code of the person served

To handle the mailbox

Recorded information on the line informs about the number of new and stored messages. If you have too many messages stored, you will first be asked to delete saved messages.

Recorded instructions ask you to press different digits in order to listen to caller's messages, record your own greetings, change your password or exit your mailbox, etc.

The following diagram gives an overview of the mailbox system and the digits to be used.

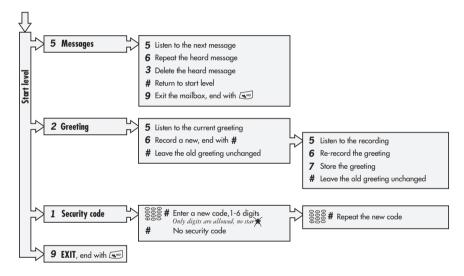

Information

Absence information (optional)

To be used during absence to inform callers about the reason and time or date of your return. If you are authorized, you can also enter absence information on another extension from your own extension.

Order

Example: Back on September 15th (=0915).

* 2 3 * (0-9) Press and enter the absence code
 Note: The absence codes consist of one digit which depends on the system connected to the exchange. Contact your system administrator regarding your available absence codes.

× 0 9 1 5 Press and enter the date (MMDD) or time (HHMM) of your return

Note: If no return time or date is needed, this step can be excluded.



Press



Wait for the call icon to stop flashing



Press to finish the procedure

Display example:



Cancel

# 2 3 # VES C	Press
~	Wait for the call icon to stop flashing
- MO	Press to finish the procedure The programmed information is erased.
	Order for another extension
* 230 *	Press
0000 X	Dial the extension number and press
(0-9)	Enter the absence code
*0915	Press and enter the date (MMDD) or time (HHMM) of the other person's return
	Note: If no return time or date is needed, this step can be excluded.
# VESC	Press
~	Wait for the call icon to stop flashing
	When the display on the other person's extension shows the

reason, and if entered, time or date of return:

Press to finish the procedure

NO

Cancel for another extension

#2	30	×	Press
----	----	---	-------



Dial the extension number and press



Wait for the call icon to stop flashing

Note: If the special dial tone is received, the authorization code for the other extension is required. Add the code and press # before pressing NO.



Press to finish the procedure

Abbreviated Numbers

Common abbreviated numbers

By using abbreviated numbers, you can make calls simply by pressing a few keys. The common abbreviated numbers consist of 1-5 digits and are stored in the exchange (by the system administrator).



Dial the common abbreviated number and press

Call-by-name

You can store frequently used numbers in the built-in Phone Book. To store, see section "Phone Book".

To call:



Select PhoneBook and press



(0-9)

Select Find&Call and press

Press repeatedly the key with the initial letter of the name until the letter is shown

To correct:



Press

If you have a lot of names starting with the same letter repeat the procedure to add the second, third, etc. letter of the name.



Press and scroll to find the name

When the name has been found:



Press

The number of the name is dialled.



Press to end the call

Quick call-by-name

(0-9) Press the key with the initial letter of the name until a name is shown

To step to the next initial letters: Press the key immediately again, shortly once, or for the 2nd next letter, shortly twice, etc.



Scroll to find the name

When the name has been found:



Press

The number of the name is dialled.



Press to end the call

Example: To call Bob. (Anita, Bill and Bob are programmed in the phone book).

- 2 Press and keep pressed Anita is shown in the display.
 - **Press again, shortly** Bill is shown in the display.



2

Press Bob is shown in the display.



Press to call Bob

Phone Book

You can create a personal directory with up to 100 names, which you can edit and erase. To use the names and numbers of the phone book to make calls, see sections "Abbreviated numbers", "Call-by-name" and "Quick call-by-name".

Enter names

Use the keypad to enter letters and characters. Press a key once for the first letter or character, twice for the second, three times for the third, etc. The most common letters are printed above each key on the telephone. All the available letters and characters are shown in the following table:

K e	Ch	arac	ters										
y	1	2	3	4	5	6	7	8	9	10	11	12	13
1	Space	-	?	!	,		:	"	"	()	1	
2	А	В	С	Å	Ä	Æ	À	Á	Â	Ã	Ç	2	Г
3	D	Е	F	È	É	Ê	Ë	3	Δ	Φ			
4	G	Н	Т	Ğ	İ	Ì	Í	Î	Ï	4			
5	J	К	L	5	Λ								
6	М	Ν	0	Ñ	Ö	Ø	Ò	Ó	Ô	Õ	Œ	6	
7	Р	Q	R	S	ß	Ş	7	П	Σ				
8	Т	U	V	Ü	Ù	Ú	Û	8					
9	W	Х	Y	Ζ	Ý	Ÿ	9						
0	0	+	&	@	/	\$	%	£	Θ	Ξ	Ψ	Ω	
#	#	*											

Note: Depending on the selected menu language, the character order may differ. For example when Greek is selected, Greek characters have precedence over less frequently used characters.

Press to switch a written character to lower case

The characters will be lower case until this key is pressed again.

When the required character is displayed, wait for the cursor to move automatically.

To correct:



×

Press

The character to the left of the cursor is cancelled and the correct character can be written.

To move the cursor:

- Press to move the cursor to the left
 - Press to move the cursor to the right

Example (to write SMITH):

- Select PhoneBook and press
 - Select Store and press
 - Select AddNew and press

7	7	7	7	Press for S	

- 6 Press for M
- 444 Press for I
 - 8 Press for T
 - 44 Press for H

As this is an example:



Press to cancel AddNew

		Add a name
$\mathbf{\hat{s}}$	YES	Select PhoneBook and press
\odot	YES	Select Stone and press
$\mathbf{\hat{s}}$	YES	Select AddNew and press
(name)	YES	Enter the name and press
000000000000000000000000000000000000000	YES	Enter the number and press


Add a name from WhoCalled or LastDialled lists



Edit a	a name	or	number
--------	--------	----	--------

$\mathbf{\hat{s}}$	YES	Select PhoneBook and press
$\mathbf{\hat{s}}$	YES	Select Find&Edit and press
$\mathbf{\hat{s}}$	YES	Select EditTelNo and press
(name)	YES	Enter the first letters of the name and press
$\overline{\mathbf{S}}$	YES	Scroll to find the name and press
	CLR	Move the cursor to position for editing, remove letters (from the left)
0000 0000 0000	YES	Enter new letters or digits and press
\bigcirc	CLR	Move the cursor to position for editing, remove digits (from the left)
0000 0000 0000	YES	Enter new digits and press Note: To skip a question, press YES to proceed.

Delete names and numbers

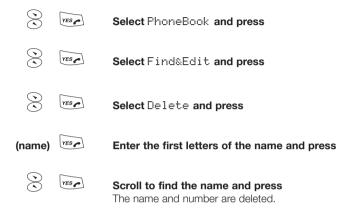

Group Facilities

Call pick-up group

People working in a team can have their telephones programmed by the system administrator to form call pick-up groups.

In a call pick-up group, any member can answer any individual call to group members.



Press to answer

Notes:

- Sweden and Finland press **X0**# YES.
- One call pick-up group can serve as an alternative to another group. Calls to the alternative group can only be answered when there are no calls to your own group.

Common bell group

Calls are signalled on a common bell.




Press to answer

Note: Sweden and Finland - press ***0**# YES.

Group hunting

As a member of a group of extensions that is called by a common number, you can temporarily leave the group:

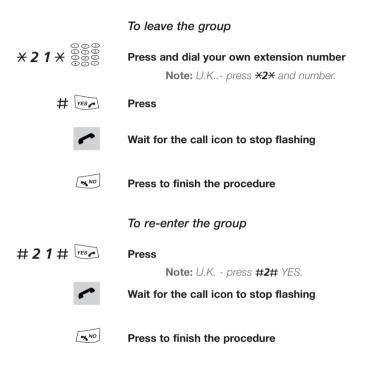

Other Useful Facilities

Account code (optional)

This function is used to charge a call to an account number or to prevent unauthorised calls from your telephone. The account code can have 1 to 15 digits.

× 61 × Press

Note: Norway and Finland - press *71*.



Enter account code and press

Dial tone.

DOO	
300	
900	
$\odot \odot \odot$	

Dial the digit or digits to get a line and the external number

Ongoing external call

When used to charge a call it is also possible to connect an ongoing external call to an account code.

During the call:

R Press to put the ongoing call on hold Dial tone.

× 61 × Press

Note: Norway and Finland - press *71*.

- Enter account code and press Dial tone.
 - **R** Press to resume the call that was put on hold

Night service

When the exchange is in night service mode, all your incoming calls to the operator are transferred to a selected extension or group of extensions. The exchange is equipped with four different night service modes:

- Common night service All incoming calls to the operator are transferred to one specific extension. Answer the call in the normal way.
- Individual night service Selected external calls to the operator are transferred to one specific extension. Answer the call in the normal way.
- Universal night service All incoming calls to the operator are transferred to a universal signalling device, e.g. the common bell. Answer the call as described in section "Group facilities - common bell group".
- Flexible night service This function permits you to order an external line and connect it directly to your telephone. Ask your operator for the external line numbers.

Order flexible night service



Press and dial the digit or digits to get a line



Press and dial the external line number



Press




Wait for the call icon to stop flashing



Press to finish the procedure

Cancel flexible night service

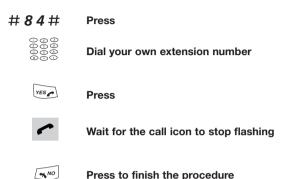

General cancellation

The following features can be simultaneously cancelled:

- Callback (all callbacks are cancelled).
- Internal and External follow-me.
- Manual message waiting/Message diversion.
- Flexible night service.

Order

Press

#001# VESC



Wait for the call icon to stop flashing



Press to finish the procedure

Alarm extension

An extension can be programmed by the system administrator as an alarm extension. A call to an alarm extension obtains automatic intrusion if the extension is busy. Up to seven calling parties may be connected at the same time.

Emergency state

In the event of an emergency the operator can switch the exchange into emergency state, during which only pre-programmed extensions are permitted to make calls.

Malicious call tracing

If you are disturbed by malicious external incoming calls, you can request a number tracing from the network provider.

You can invoke tracing during or after an ongoing conversation. The external line can be held for a limited period of time.

Order

During an ongoing conversation:

R Press

Dial tone.

* 39 # Press

The system acknowledges with different tones whether the tracing request was accepted or rejected.

Direct Inward System Access, DISA (optional)

If you are assigned to use this function and you are working externally, you can call your office and get access to an external line in order to make business calls. The business call will be charged your office extension number or an account number. You will just be charged for the call to the office.

The external telephone must be of push button type provided with hash (#) and star (*) keys or a mobile telephone adapted for dial tone pulses (DTMF).

After a completed DISA call you must hang up before a new DISA call can be made.

Depending on the type of authorization code and if an account code is used, different procedures must be used:

With common authorization code

000	Call the DISA function at your office
0	Dial tone.

×72× Press

000 000 #	Enter the authorization code and press
0	Dial tone.

000 000 000	Dial the external number
-------------------	--------------------------

With individual authorization code

000 000	Call the DISA function at your office
0	Dial tone.

×75× Press

000

- Dial your own extension number and press Dial tone.
 - Dial the external number

Paging (optional)

Persons equipped with a wireless paging receiver or assigned to a lamp signal, can be paged from a telephone set. Depending on the type of paging system it is possible to send digit messages or voice messages to the paged person.

Paging can also be initiated and answered during an ongoing call. Make an Inquiry call and proceed according to the appropriate procedure for the type of connected paging system. You can then either return to the ongoing call or transfer the paging call to the person that was put on hold. If this person is an external subscriber, your exchange must be programmed for this function.

If you receive a congestion tone when paging, this indicates that the paged person has his paging receiver in the charging rack and is probably out of the office.

Paging receivers without a display and paging via lamp signals

When there is no answer or a busy tone, keep the telephone off hook:

7 Press

Press

Wait for an answer with the telephone off hook.

If you want to start paging without calling the person:

*** 8 1 ***



Dial the extension number and press Wait for an answer with the telephone off hook.

Paging receivers with a display

When there is no answer or a busy tone, keep the telephone off hook:



Press

Wait for the paged person to call back.

If you want to start paging without calling the person:





Dial the extension number and press Wait for the acknowledgement tone.



Press

Wait for the paged person to call back.

If you want to send a digit message code:

×	8 1	×	Press
---	-----	---	-------



Dial the extension number and press

0000 0000 0000	# [ES
----------------------	------------	----

Dial the message code (1-10 digits) and press Wait for the acknowledgement tone.



Press

If expected, wait for the paged person to call back.

Paging receivers with voice message

When there is no answer or a busy tone, keep the telephone off hook.

7 Press

Press

Leave your message after the tone. Just before the predetermined speech time is ended, a warning tone will be heard.

If you want to start paging without calling the person:





Dial the extension number and press Leave your message after the tone. Just before the predeter-

mined speech time is ended, a warning tone will be heard.

Alarm paging

×	8	1	0 ×	Press
---	---	---	------------	-------



Dial the extension number and press Wait for the acknowledgement tone.



If you want to send an alarm message code:

810 Press



Dial the extension number and press



Dial the message code (1-5 digits) and press

Wait for the acknowledgement tone.



Press

Press

To acknowledge an alarm

You must acknowledge the alarm to be terminated:



Authority

Do not disturb

Switch off your telephone. The caller will receive a special tone indicating that you are not available.

If you need to make calls, you can switch off the ringing signal. Press the CLR key until the ringer off icon is shown in the display. Press the CLR key again to switch on the ringing signal.

Authorization code, common (optional)

If you are assigned to use a common authorization code (1 to 7 digits) you can temporarily change any used telephone within the exchange to the authority level connected to this code. You can use the code for one call only or you can open the telephone for some calls and lock it when leaving the telephone.

To use for a single call

×72× Press



Enter authorization code and press Wait for verification tone.

DOO	
$D \oplus \oplus$	
$\mathbb{D} \oplus \mathbb{O}$	
$\mathbf{O} \mathbf{O} \mathbf{O}$	

Dial the digit or digits to get a line and the external number

Temporary unlock of an extension for a number of calls



Authorization code, individual (optional)

If you are assigned to an individual authorization code (1 to 7 digits, assigned to your own extension) you can lock your own extension to a common authority level, e.g. when out of the office. You can also temporarily change any other used telephone within the exchange to the same authority level as you have on your own telephone.

The individual code can be changed from your own extension.

To lock your telephone

*** 7 6 *** Press



Enter authorization code and press Wait for verification tone.



Press to finish the procedure

To make calls with your authority level when your telephone is locked

*75 *	Press
0000 # ver	Enter authorization code and press Wait for verification tone.
0000 0000 0000	Dial the digit or digits to get a line and the external number
	To unlock your telephone
# 7 6 *	Press
00000 # VESC	Enter authorization code and press Wait for verification tone.
MO	Press to finish the procedure
	To assign your own authority level to another telephone
* 7 5 *	Press
0000 X	Enter authorization code and press
○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	Dial your own extension number and press Wait for verification tone.
0000 0000	Dial the digit or digits to get a line and the external number

To change your individual authority code

* 7 4 *	Press
0000 X	Enter old authorization code and press
© ⊕ ⊕ ⊕ ⊕ € € € € € € € € € € € € € € €	Dial new authorization code and press Wait for verification tone.




Press to finish the procedure

Settings and Adjustments

Key lock, automatic

To protect the key pad against accidental key pressing. When activated, the keys are automatically locked one minute after the telephone has been used.

To lock or unlock

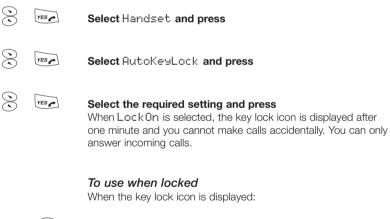



Press


UnLock keypad? is displayed.



Press to unlock the keypad temporarily

Key click

The key click, the acknowledgement sound when a key is pressed, can be enabled or disabled:

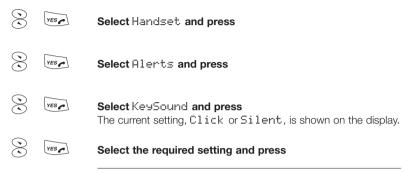

Display light

The display illumination is automatically switched on when a key is pressed. The illumination can be enabled or disabled:



Phone lock

To protect the telephone against use by another person:



- Select Handset and press
- VES C
- Select PhoneLock and press



Select:

- Power-On to prevent using the telephone without the PIN code
- Subscribt to prevent editing network subscriptions



Enter the PIN code and press

The current setting, On or Off, is shown in the display.

Select the required setting



Press to confirm your choice

When the telephone is locked, EnterPIN is displayed.

To use the telephone:




Enter the PIN code and press

Note: If an incorrect PIN code is entered three times, the telephone will be blocked. To unlock a blocked phone, see section "Unlock a blocked telephone".

Change PIN code

The default PIN code is 0000. The code can be changed from time to time. To change:

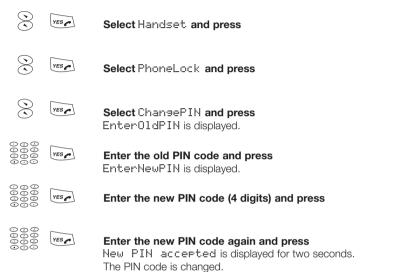

Unlock a blocked telephone

Your phone will be blocked if an incorrect PIN code is entered three times (the display shows PINBlocked Unblock?). To unlock a blocked telephone, the IPEI code and a new PIN code must be entered:



New PIN accepted is displayed for two seconds. The PIN code is changed.

Direct call

You can set your telephone to call a programmed number when any key is pressed. To be used temporarily, e.g. as an alarm or an emergency number.

Note: When direct call is activated the automatic key lock is deactivated.

To activate



Select Handset and press



Select DirectCall and press Enable Direct Call? is displayed.



Press

DirectC.No is displayed. If a direct call number has previously been set, the number is displayed.



Enter the direct call number and press

If the displayed number is to be used again, press YES.

Display example:

DirectCall 1234567

To call

Press any key on the telephone

To cancel

It is important that the pause between key presses is not too long, as this will cause the direct call number to be dialled. Therefore the pause between each key being pressed should be as short as is possible.

\bigcirc	
\sim	YES
()	\sim

Select Handset and press



Select DirectCall and press Disable Direct Call? is displayed.




Press

You must press within two seconds to prevent the direct call number being dialled.

Language

The default language is English. To change to another language:





Select Language and press



Scroll until you find the required language



Press to confirm

Note: To update the chosen language with the language of the exchange, the telephone must be switched Off and On once. However, if the chosen language is not supported by your exchange, you will continue to receive some of the information in English.

Display contrast

The display has eight contrast levels to make the display easier to read.

Select Handset and press



Select Display and press



Select Contrast and press The contrast level bar is displayed showing the current level.



Adjust the contrast A beep is heard when the maximum or minimum contrast is reached.



Press to confirm

Earpiece volume

Use the volume keys to change the volume of the earpiece during a call.



Press to change the volume

Ringing signal volume

Your telephone has eight volume levels. At the lowest level the signal is switched off (indicated by the Ringer off icon on the display - incoming call is indicated by the Off hook icon and the warning light).



Audible Signals

The following different tones and signals are sent from the exchange to your telephone.


Tone characteristics

The tones shown in this section are the most used tones worldwide. Many markets use a differing tone for one or more situations. If you get a tone that is not described or you cannot identify, ask your system administrator.

Dial tone	
Special dial tone	
Ringing tone or Queue tone	every 4th second
Busy tone	
Congestion tone	
Number unobtainable tone	
Call waiting tone	
Intrusion tone	
Conference tone	every 15th second (to all parties)
Verification tone	
Warning tone, expensive route	

Ringing signals

Three different ringing signals inform you about the type of the incoming call. The signals shown in this section are the most used signals worldwide. Many markets use a differing signal for one or more situations. If you get a signal that is not described or you cannot identify, ask your system administrator.



Note: If you use a melody for the external or recall ringing signal, the melody will be repeated in the same way as for internal calls.

Ringer tones and melodies

You can change the ringer tone for the different types of calls.



- Select Alerts and press
 - Select RingType and press



 \bigotimes

Select type of call and press Internal, External, CallBack, Message or Page is displayed.



Select sound or select melody 1-6:

Every time you press the key, the next sound or melody will be heard:


Low
Medium
High
Mixed
Melody 1: Jumpy
Melody 2: Eine kleine Nachtmusik
Melody 3: Toccata
Melody 4: Für Elise
Melody 5: Samba
Melody 6: Blues Rhythm



Press to confirm your choice

Discreet ringing

The first three ringing signals will ring at the lowest audible volume level. To be used, e.g. if you are in a conference and you expect an important call.

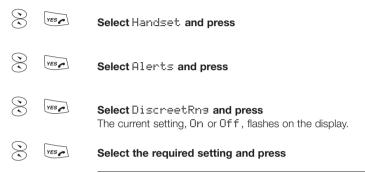

No ringing

Incoming calls are indicated by the Off hook icon on the display and the warning light. To be used, e.g.when you do not want to be disturbed but want to make outgoing calls.



Press

The Ringer off icon is shown on the display.

To turn on the ringing signal, press the CLR key once again.

Display Information

The display gives you feedback information such as traffic state and connected telephone numbers.

The following display examples show the different states of your telephone.

Idle telephone

Depending on the state and setting of your telephone, different information can be shown.

Normal:

Work	4328
16-Mar	10:22
	IIII Þ

"Work" is the programmed name of your network and can be renamed to something more suitable, i.e. your first name, company name, etc. To rename your network, select Networks and Rename from the menu. To the right of the display is your own extension number.

Note: Date and time is only available for newer versions of the exchange.

Personal number profile activated:



The middle line shows the activated profile.

Follow-me activated:

4328	>	
4444		
		ĺ ∎∎∎ Þ

The display shows your own extension number 4328 diverted to extension number 4444.

Outgoing call

Normal outgoing call:

When you make an outgoing call both the traffic state and the dialled number or name are displayed:



When the call is answered:



Diverted call:

If the dialled number is diverted, the diversion information is shown. For example, the display shows the dialled number 3333 (Smith) diverted to 4444 (Brown):

ull	1	IIII P		~	III
>		3333	>		SMITH
		4444			BROWN

When the call is answered, only the number of the answering position is displayed:



Incoming call

Normal incoming call:

If available, the number or the name of the caller is displayed. The examples show an incoming call:



When you have answered the call, the caller's number is moved to the right of the display.

Diverted call:

A diversion indicator before the number or name informs that the call is diverted to your telephone. For example, the display shows that number 3333 (Smith) was dialled, but the call was diverted to you:



When you have answered the call, the display shows only the caller's number.

A personal number profile is activated:

The first row shows the number or name of the caller. The second row shows the diversion indicator before your number or name:



When you have answered the call, the display shows only the caller's number.


Installation

Connecting the battery

Your telephone is supplied with a high capacity nickel metal hydride (NiMH) battery.

Note: An alarm sounds when there is less than 15 minutes calling time left in the battery.

Attach the battery to the telephone as shown in the figure

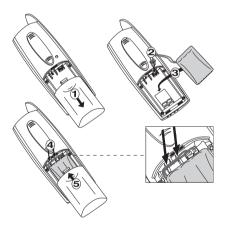

Note: Because the status of a newly received battery is uncertain, it is recommended to charge it completely to ensure that you have sufficient talk and standby time.

Battery performance

The table below indicates the performance.

	Talk time	Standby time	Charge time
	(hours)	(hours)	(minutes)
High capacity battery:	15	100	180

Clip on and unclip

Clip on and unclip the clip to/from the back of the telephone as shown in the figure

Clip connection:




Clip disconnection:



Note: Do not put your fingers on the display when you press. You can remove the clip, but do not do this too often, because this may wear out the fastening.

Connecting the charger

Connect the mains adapter to the charger and connect it to the mains outlet as shown in the figure



Charging the battery

When the battery requires charging, you will hear a warning sound and it is indicated in the display. See section "Battery performance" for information on charging time.

Connect the telephone to the charger as shown in the figure



The charging process will start automatically, indicated by a fast flashing battery icon and a green light on the charger. When charging is complete, the icon stops flashing and the green light is turned off.

Notes:

- Do not connect your portable to the charger without a battery.
- If the battery is completely flat it can take a few minutes before the green light on the charger is lit.
- If the standby time for your DT288 becomes too low, you should replace the battery.
- Only use the charger that is delivered with your portable to charge the battery.

TroubleShooting

This section contains information on how to solve common operational problems, and warnings you may receive.

Go through the following lists if you encounter any problems. If this checklist does not solve the problem, contact your system administrator. If others have similar problems, there may be a system error.

Fault	Probable cause	Action or comment
No display	The battery is low or the telephone is defective	Charge the battery
No ringing	The Ringer off icon is on or the tele- phone is defective	Off icon on= Turn on the ringing signal
Signal strength icon off	Out of coverage area or the system or telephone is defective	Enter coverage area or contact the system administrator
Battery icon and the warning lamp flashes slowly	The battery is low	Charge the battery
Call icon is switched off after 2 seconds	The telephone is defective	Contact the system administrator
Warning lamp flashes slowly	Indicates a warning	The display informs
Warning lamp steady light	The telephone is defective	Contact the system administrator

Display shows	Probable cause	Action or comments
PhoneBook empty	No names stored in the phone book	Add names
Memory full	The memory is full, you cannot add names	Delete a name
EnterXXX	IPEI code or PIN code is missing	Enter the required IPEI or PIN
No Access	The network is in range, but no access rights	Re-subscribe
No Network	Cannot connect to the network	Re-subscribe or contact the system administrator
PINBlocked Unblock	The phone is blocked, i.e. the wrong PIN code entered three times	Press YES and enter the IPEI code

Index

Abbreviated numbers 41 Absence information 38 Account code 51 Alarm extension 53 Answer calls 13 Audible signals 72 Authority 60 Authorization code, common 60 Authorization code, individual 61 Battery 79 Busy extension or external line 22 Bypass diversion 27 Call forwarding 25 Bypass diversion 27 External follow-me 26 Internal follow-me 25 Personal number 28 Setting form for search profiles 32 Call number from WhoCalled list 16 Call pick-up group 49 Call-by-name 41 Change PIN code 67 Charger 81 Charging the battery 81 Clip on and unclip 80 Common abbreviated numbers 41 Common bell group 49 Conference 20 Connecting the battery 79 Connecting the charger 81

Description 6 Display info 7 Display menu 9 Menu structure 10 Dialling during a connected call 21 Direct call 68 Direct Inward System Access, DISA 54 Discreet ringing 75 Display contrast 70 Display information 76 Display light 65 Do not disturb 60 During calls 17 Conference 20 DTMF 21 Inquiry 18 Inquiry via the PhoneBook 19 Mute 17 Put a call on hold 20 Refer back 18 Transfer 19 Earpiece volume 70 Emergency state 54 External follow-me 26 Free seating 12 General cancellation 53 Group facilities 49 Group hunting 50 Guidelines 5 Important 4

Incoming calls 13 Information 38 Inquiry 18 Installation 79 Integrated voice mail 35 Internal follow-me 25 Internal messages 33 IPEI code 4 Kev click 65 Key lock 64 Language 69 Last external number redial 15 Mailbox 35 Make calls 14 Malicious call tracing 54 Manual message waiting (MMW) 33 Messages 33 Mute microphone 17 Mute warning signal 17 Night service 52 No ringing 75 On hold 20 Other useful facilities 51 Outgoing calls 14 Paging 56 Alarm paging 58 Paging receivers with a display 57 Paging receivers with voice message 58 Paging receivers without a display and paging via lamp signals 56 Personal number 28 Phone book 43 Add a name 45 Add a name from WhoCalled or LastDialled lists 46 Delete names and numbers 48 Edit a name or number 47 Enter names 43

Phone lock 66 Quick call-by-name 42 Redial 15 Redial number from LastDialled list 15 Refer back 18 Ringer tones and melodies 74 Ringing signal volume 71 Ringing signals 73 Settings and adjustments 64 Change PIN code 67 Direct call 68 Display contrast 70 Display light 65 Earpiece volume 70 Key click 65 Key lock 64 Language 69 Phone lock 66 Ringing signal volume 71 Unlock a blocked telephone 67 Short numbers 41 Switching On/Off 11 Tone characteristics 72 Transfer 19 Troubleshooting 82 Unlock a blocked telephone 67 Voice mail 35 Volume 70 When you receive a busy tone 22 Automatic callback, extension 22 Automatic callback, external line 23 Intrusion on a busy extension 24

Ericsson communications solutions

for enterprise networks combine and improve advanced ways of exchanging information via voice, data, video and evolving future media.

This requires a true understanding of how businesses and professionals interact an understanding that goes far beyond meeting just the technological requirements.

Our customers include owners of small to large enterprise networks, local as well as multinational. We also offer solutions for Internet service providers.

We deliver quality of service over converged networks. We provide staff with full onsite and offsite mobility. We integrate computer and telephony applications on the desktop. We enable coordination of all business interactions over the media of choice. In essence, we help businesses forge enduring relationships with customers.

Ericsson is the leading provider in the new telecoms world, with communications solutions that combine telecom and datacom technologies with the freedom of mobility for the user. With more than 100,000 employees in 140 countries, Ericsson simplifies communications for its customers - network operators, service providers, enterprises and consumers - the world over.

Ericsson Enterprise AB All rights reserved. For questions regarding the product, please contact your Ericsson Enterprise Certified Sales Partner. Also visit us on www.ericsson.com/enterprise